



CXM FFT ANALYZER AND CXBalancer NEW ENHANCEMENT

1 Overall value (2CH)


CXBalancer – VER. 1.51

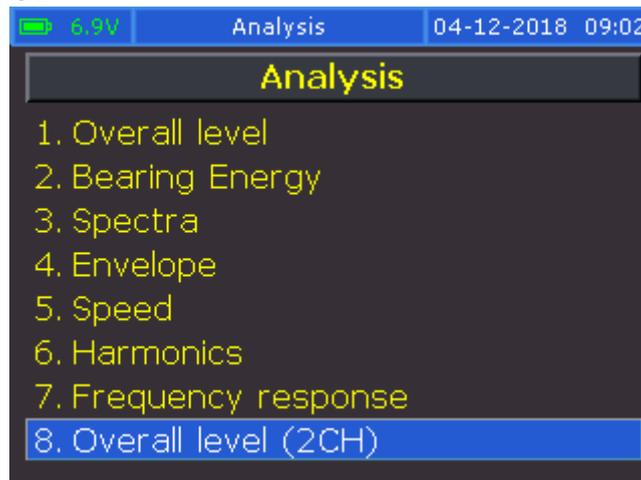

CXM FFT ANALYSER – VER. 1.41

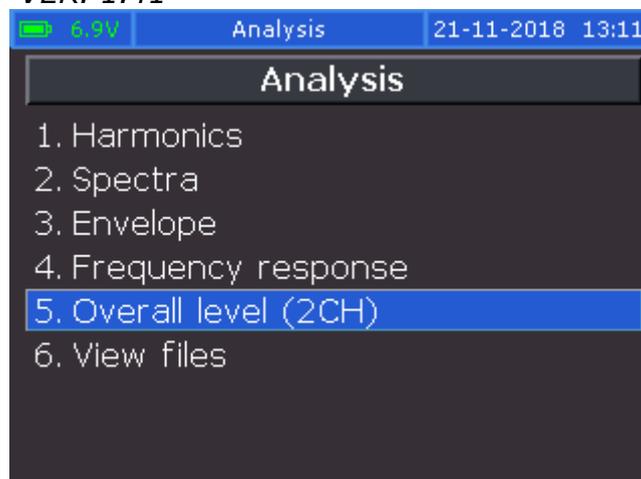

In this menu, the overall values are shown for both channels. The refreshing time is about 2 seconds.

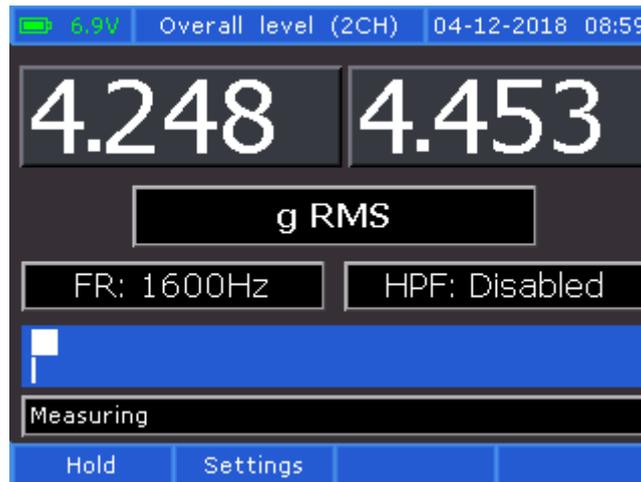


2 Save screen as image file (bmp format)

CXBalancer – VER. 1.51 and CXM FFT ANALYSER VER.1.41

From context menu, the screen content can be saved in a file onto the internal microSD Card.

The screens can be saved in the following menus:


- View files (Spectra, Envelope and Frequency response)
- Spectra (in HOLD mode only)
- Envelope (in HOLD mode only)
- Frequency response (in HOLD mode only)

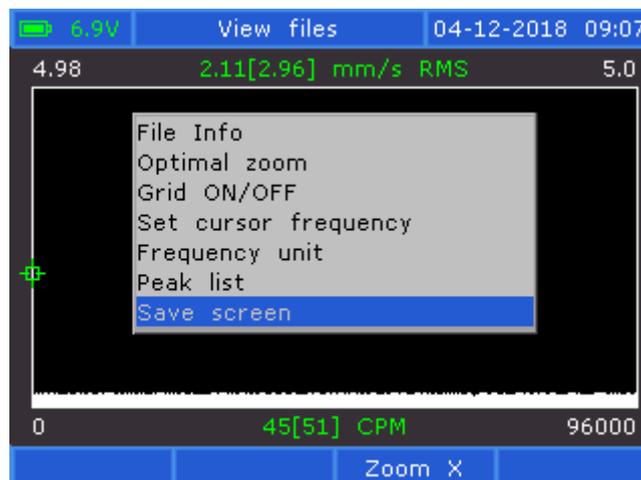

3 Editing file name

CXBalancer – VER. 1.51 and CXM FFT ANALYSER VER.1.41

Before saving the measurement into the file, the user can partially edit the file name (alphanumeric). The instrument proposes a file name, but the user can change it partially, by using the arrow keys. The file suffix and the file extension cannot be changed.

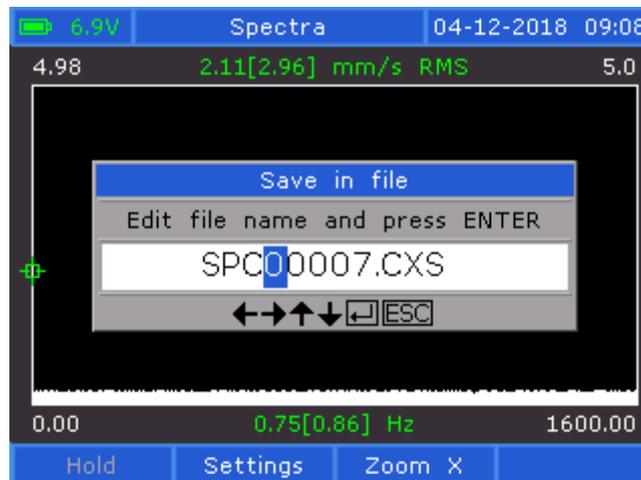

The file name can be edited in the following measurements:

- Spectra
- Envelope
- Frequency response
- Balancing

Documentation Feedback

Any suggestions and comments for improving this Application Notes should be e-mailed at mainttech@live.se

***MaintTech Sweden** uses feedback for continuous improvement of our documentation and for future **MaintTech** products. We request comments be specific and include the product name and version. We cannot provide personal responses to every message received, but please be assured that all feedback will be given careful consideration for future improvements to the **MaintTech** documentation or software.*

Technical Support

Contact Details

For any problem regarding this application, feel free to contact our support team at: mainttech@live.se

To know more about us, visit the following website: <http://www.mainttech.se/>