


## Update the software in CXM FFT Analyzer

Connect the instrument to your computer with the USB communication cable.

Turn on the instrument. In Main Menu select 5. PC communication.

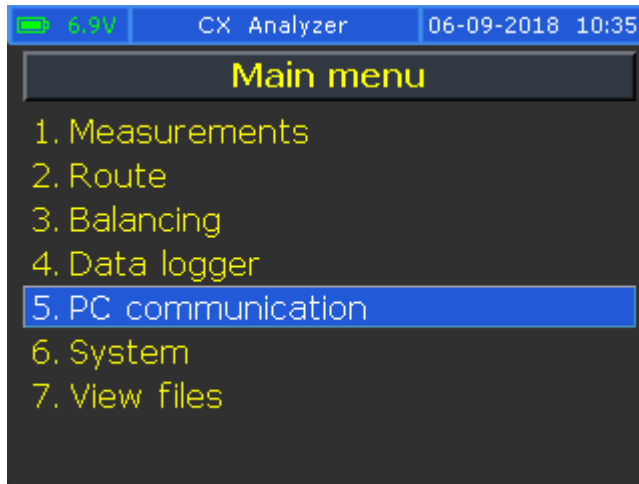

The window below is shown in the computer.

The folder PROGRAM contains the instrument software file.



Click on PROGRAM folder and the existing instrument software file is shown.




The instrument software file has always the extension .CMP and it must be placed in the PROGRAM folder. Otherwise the instrument does not find the software.

If you have received a new software file to CXM, copy this new file to the PROGRAM folder. You do not need to erase the old file.

Turn off the instrument and disconnect the USB cable.

Now press the  Esc/Back key and  at the same time and release the both keys.

Now you see this window:

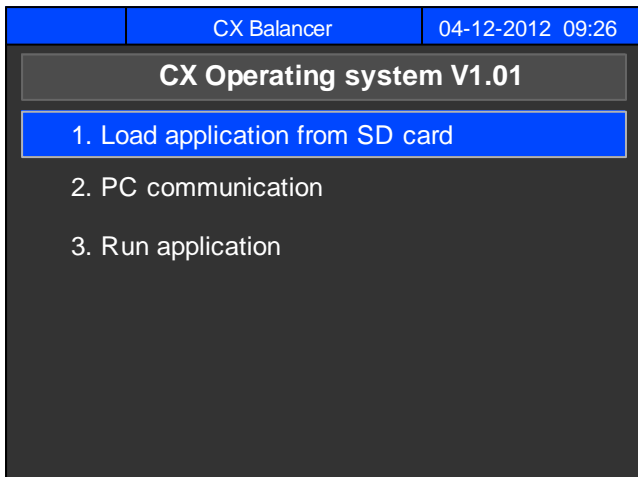

Select 1. Load application from SD card and press ENTER.


A pop up window shows up with the existing program files. If there are several program files, you get a list and you **select the latest file**. If there is only one file, this will be selected automatically.

Now the file is stored in the RAM memory and it can run only until the instrument is turned off.

**Note: Do not turn off the instrument!**


You must store the file in the FLASH memory by doing the following:

Go to Main Menu and select 6. System and press ENTER.

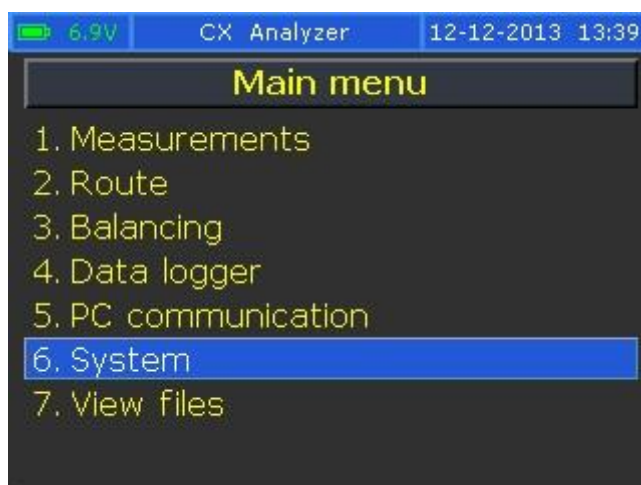

This window shows up.

Select 1. Update program, press Enter and the file will be stored in FLASH memory.

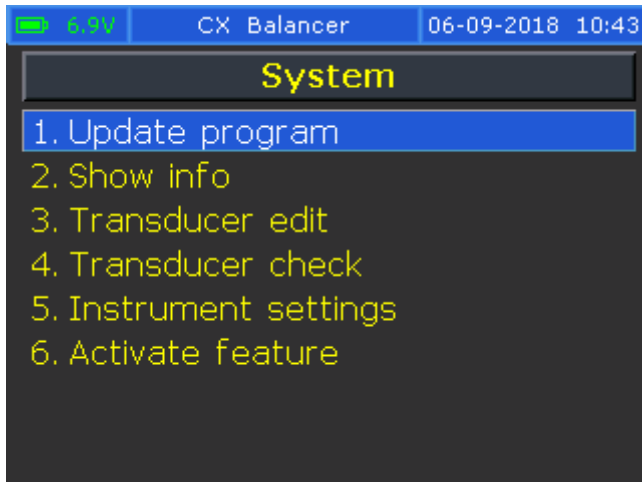

Now you have the latest software file in your instrument.